

Key:

StrataBit Capsheet



StrataBase Underlay



Strata Angle Fillet

**Construction Notes:**

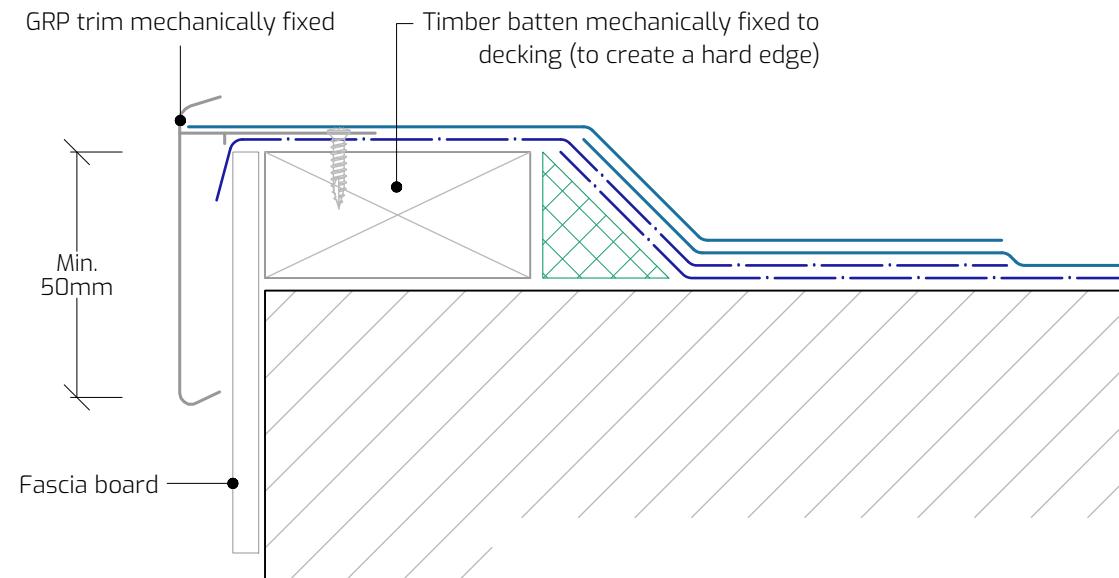
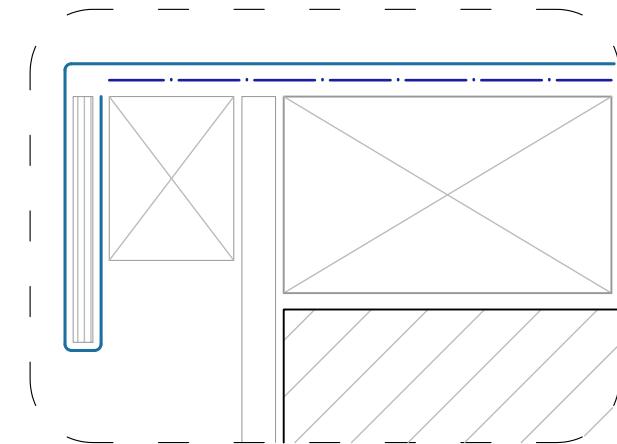
Raise open perimeter check kerb, using treated timber, to give an upstand height of 40mm above the finished roof level.

Mechanically fix the GRP trim at 150mm centres or as per the site specific wind-load calculation. Alternatively, create a welted drip as indicated.

The system build-up and application should adhere to the STRATA issued specification.

All surfaces must be clean, dry, and suitably prepared to accept the waterproofing system.

All details should be installed in full compliance with the most up-to-date NHBC Standards, BS 8217, BS 6229, and STRATA recommendations.

Alternative Detail (NTS)**Drawing Title:** Check Kerb**Drawing Number:** SB-TO-C33**Scale:** 1:3**Drawn By:** E.V.**Date:** 26/09/2025T: 028 9030 2924 | E: technical@stratawaterproofing.com | W: www.stratawaterproofing.com

Copyright Reserved - Please note that this drawing and the copyright therein is the property of Strata Waterproofing Systems and is issued on the understanding that the drawing or any detail or work shown is not to be copied or given to a third party unless written permission is first obtained from Strata Waterproofing Systems. The drawing is valid only when approved by the Architect / Contractor concerned.

This detail is representative of a typical situation and provided for illustration purposes. Insulation thickness shown may differ in accordance with the specified U-value requirement.

