

### Key:

- StrataBit Capsheet
- StrataBase Underlay
- StrataTherm Insulation
- StrataVap Air & Vapour Control Layer

## Construction Notes:

Mechanically fix timber battens to the perimeter to create a hard edge. (100mm wide & 10mm thinner than the insulation, so as to prevent lap build up).



Mechanically fix the GRP trim at 150mm centres or as per the site specific wind-load calculation. Alternatively, create a welted drip as indicated.

The system build-up and application should adhere to the STRATA issued specification.

All surfaces must be clean, dry, and suitably prepared to accept the waterproofing system.

All details should be installed in full compliance with the most up-to-date NHBC Standards, BS 8217, BS 6229, and STRATA recommendations.

### Alternative Detail (NTS)

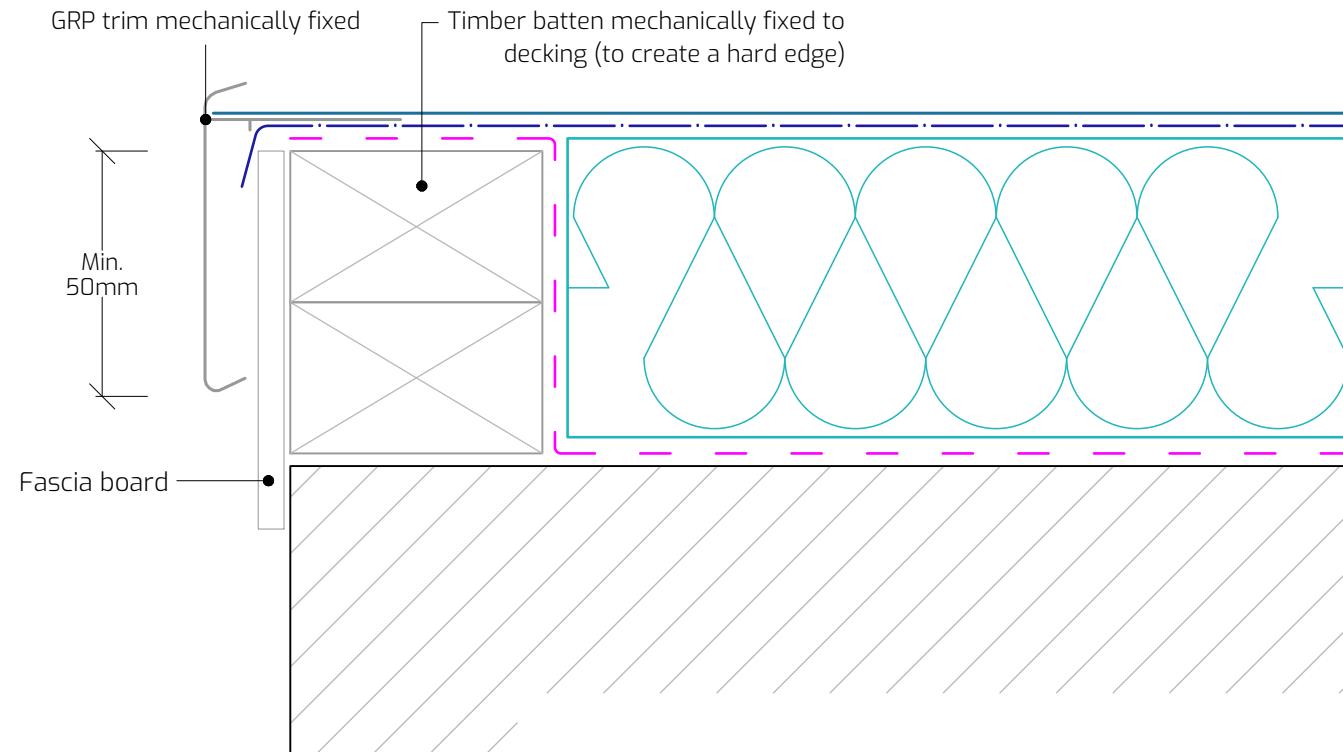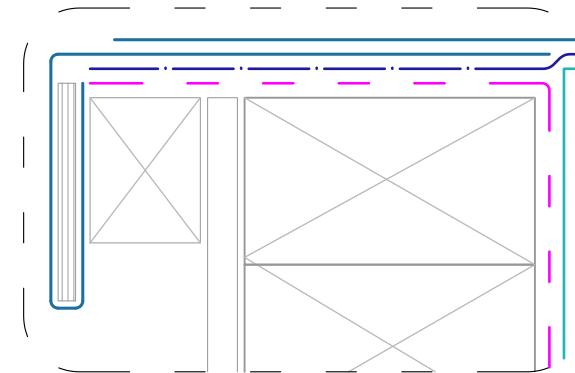

**Drawing Title:** Drip Edge

**Drawing Number:** SB-T0-W33

Drawn By: E.V. Date: 12/09/2021

T: 028 9030 2924 | E: [technical@stratawaterproofing.com](mailto:technical@stratawaterproofing.com) | W: [www.stratawaterproofing.com](http://www.stratawaterproofing.com)

Copyright Reserved. Please note that this drawing and the copyright thereto is the property of Strata Water Proofing Ltd.

Copyright Reserved - Please note that this drawing and the copyright therein is the property of Strata Waterproofing Systems and is issued on the understanding that the drawing or any

detail thereof will not be divulged to a third party unless written permission is first obtained from State Water Resources Board. The above is in addition to the provisions of the

This detail is representative of a typical situation and provided for illustration purposes only.

Insulation thickness shown may differ in accordance with the specified U-value requirement.

---

Page 10 of 10