

Key:

StrataBit Capsheet	
StrataBase Underlay	
StrataTherm Insulation	
StrataVap Air & Vapour Control Layer	

Construction Notes:

Mechanically fix timber battens to the perimeter to create a hard edge. (100mm wide & 10mm thinner than the insulation, so as to prevent lap build up).


Mechanically fix the GRP trim at 150mm centres or as per the site specific wind-load calculation. Alternatively, create a welted drip as indicated.

The system build-up and application should adhere to the STRATA issued specification.

All surfaces must be clean, dry, and suitably prepared to accept the waterproofing system.

All details should be installed in full compliance with the most up-to-date NHBC Standards, BS 8217, BS 6229, and STRATA recommendations.

Alternative Detail (NTS)

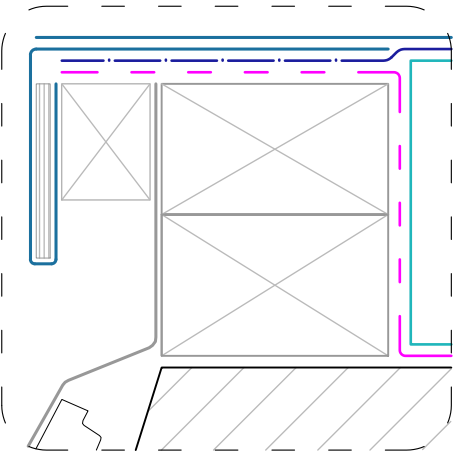

Timber batten mechanically fixed to decking
(to create a hard edge)

GRP trim mechanically
fixed

Min.
50mm

Lead cover flashing mechanically
fixed to the timber batten and
fully formed to provide cover to
the tiles/slates

Roof tile



Drawing Title: Mansard

Drawing Number: SB-TO-W35

Drawn By: E.V.

Scale: 1:3

Date: 12/09/2025

T: 028 9030 2924 | E: technical@stratawaterproofing.com | W: www.stratawaterproofing.com

Copyright Reserved - Please note that this drawing and the copyright therein is the property of Strata Waterproofing Systems and is issued on the understanding that the drawing or any detail thereof will not be divulged to a third party unless written permission is first obtained from Strata Waterproofing Systems. The drawing is valid only when approved by the Architect / Contractor concerned.

This detail is representative of a typical situation and provided for illustration purposes. Insulation thickness shown may differ in accordance with the specified U-value requirement.